

Begin by making sure the rifle is unloaded. Remove the receiver cover, bolt carrier, and recoil assembly.

AK HAND GUARD

1. The small lever at the rear of the gas tube must be raised, releasing the gas tube. Remove the gas tube.



2. On the front inside right of the lower hand guard, another lever must be raised to allow the bracket to move forward, releasing the lower hand guard.



3. The original upper hand guard is removed by rotating it 180 degrees around the gas tube, then pulling down.



4. Install your new hand guards in the reverse order. Note: The new hand guard is designed to fit tighter than the original.

