





## AK/SKS Military Grade Windage & Elevation Sight Tool

**Make sure your rifle is unloaded and ensure that there is no ammunition in the chamber. Remove the tool after each adjustment before firing the rifle.**

If your front sight has never been adjusted before, it may be frozen in place. To reduce the risk of damaging this tool, start by tapping the sight base with a hammer and brass pin punch. This will break the base free and ease the adjustment.

**Windage Adjustments:** To move the point of impact left or right (windage), position the C-clamp so that the round sight base lines up with the threaded push rod and the relief hole. **Failure to line this up properly can cause damage to the sight tool.** Turn T-handle clockwise to push the sight base in the desired direction. Pushing the front sight to the right will move the point of impact to the left. Pushing the front sight to the left will move the point of impact to the right.

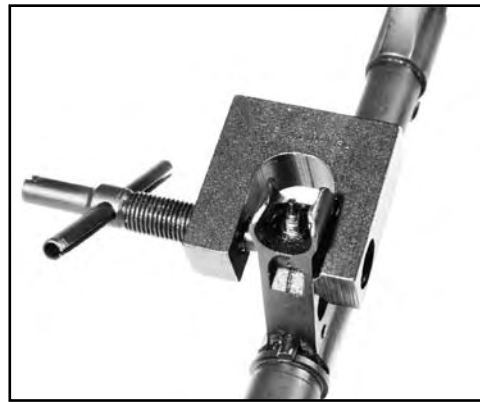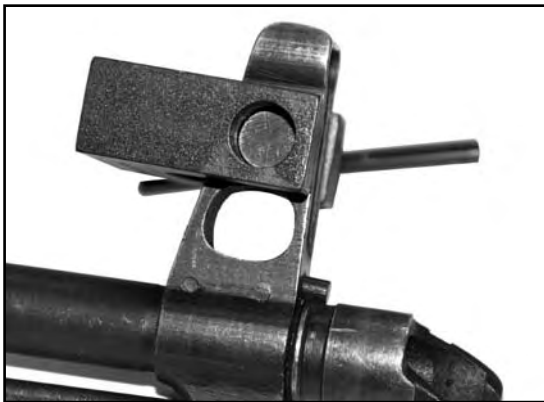

**Elevation Adjustments:** To move the point of impact up or down (elevation), position the slotted portion of the T-handle through the hole on the top of the sight housing and onto the sight post. Turn the T-handle clockwise to lower the sight post, counter clockwise to raise it. Raising the front sight will lower the point of impact. Lowering the front sight will raise the point of impact.

