




# AK Original Style Fixed Stock

**1) MAKE SURE YOUR RIFLE IS UNLOADED AND ON SAFE**



**2) (A)** Remove the receiver cover by pressing in the recoil assembly tab. Once the cover is off remove the recoil spring to gain access to both screws holding the stock in place. **(B)** Remove both screws and the stock. **(C)** Insert the TAPCO fixed stock.

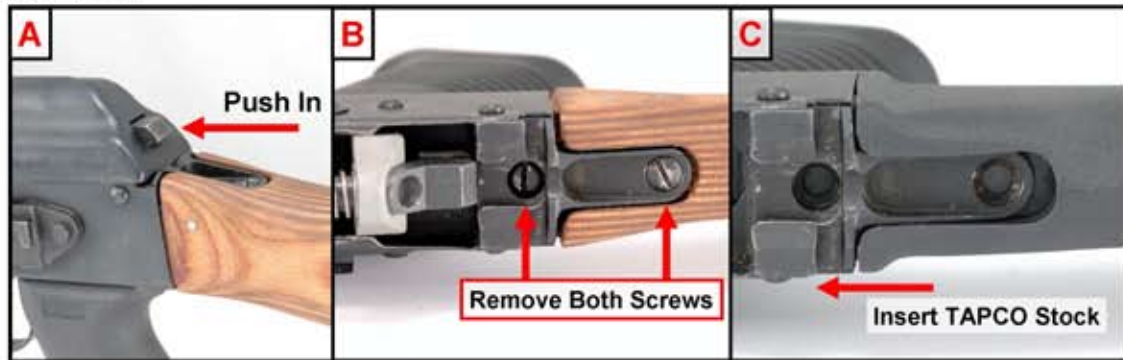

**3) During this step eye protection is recommended. (A)** Using the supplied 3/32" bit, drill two pilot holes into the TAPCO stock. **(B)** These pilot holes should be about 3/4" deep. Ensure that the stock is firmly seated on the receiver before drilling. **(C)** The supplied screws can now be installed. A drop of liquid soap on the screw will ease the installation.



**4)** Once both screws are in place the recoil assembly and receiver cover can be reinstalled.

