





AK T6 Collapsible Stock

1. **Make sure your rifle is unloaded and ensure that there is no ammunition in the chamber.**
2. Remove the receiver cover by pressing in the recoil assembly tab (A). Once the cover is off, remove the recoil spring to gain access to both screws holding the stock in place. Remove both screws and the stock (B). Insert the TAPCO T6 Collapsible Stock (C).

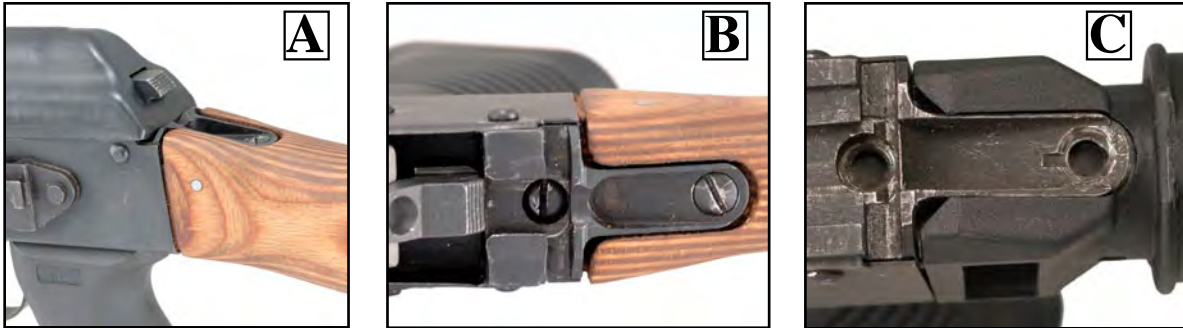

3. While wearing safety glasses use the supplied 3/32" drill bit to create two pilot holes approximately 3/4" deep (D). Using the supplied screws, secure the stock to the receiver (E). Use a light oil or liquid soap on the screws to ease this process.

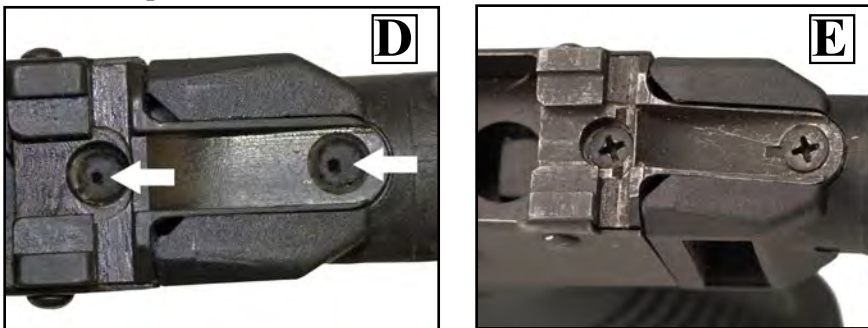

4. Reassemble the recoil assembly and top cover.
5. The TAPCO sling adaptor is designed to work on either side of the AK T6 collapsible stock. Tighten the provided screw until both sides of the sling adaptor are flush with the stock. Over tightening of the screw can cause damage to the adaptor.

